

HP Digital Photography



HP PhotoSmart 435 2048x1536 (3.14MP), 16M (180/18/12 ph.), SD (not incl.), 1.5" LCD, 5xZoom, Flash, USB 2.0	*	\$145.-	🔒	
HP PhotoSmart M307 2080x1544 (3.2MP), 16M (142/40/13/8 ph.), SD (not incl.), 1.8" LCD, 15xZoom (3x & 5x), Flash, USB 2.0	*	\$195.-	🔒	
HP PhotoSmart M407 2344x1752 (4.1MP), 16M (162/26/10/6 ph.), SD (not incl.), 1.8" LCD, 18xZoom (3x & 6x), Flash, USB 2.0	*	\$240.-	🔒	
HP PhotoSmart R507 2320x1744 (4.1 Megapixels), 32M Internal (max. 45 ph. @ 2MP; 22 ph. @ 4MP; 11 ph @ 4MP (best)), SD/MMC Slot, 1.5" LCD, 21xZoom - (Pentax 3xOptical & 7xDigital), Rechargeable Li-Ion Battery , AC Adapter , Panorama Mode , Flash, Sound, Video, USB 2.0, 87x57x28 mm., 157 gr. (including battery)	*	\$350.-	🔒	
HP PhotoSmart R507 with Dock (charger for in-camera & spare battery (included), USB adapter to PC or printer & TV)	*	\$410.-	🔒	
HP PhotoSmart R707 2612x1968 (5.1 Megapixels), 32M Internal (max. 56 ph. @ 1MP; 33 ph. @ 3MP; 10 ph. @ 5MP (best)), SD/MMC Slot, 1.5" LCD, 24xZoom - (3xOptical & 8xDigital), Rechargeable Li-Ion Battery , AC Adapter , Panorama Mode , Flash, Sound, Video, USB 2.0, 98x36x60 mm., 208 gr. (including battery)	*	\$390.-	🔒	
HP PhotoSmart R707 with Dock (charger for in-camera & spare battery (included), USB adapter to PC or printer & TV)	*	\$450.-	🔒	
HP PhotoSmart 945 2608x1952 (5.08 Megapixels Effective), 36-bit color, Shutter Speed: 16 to 1/2000 sec, 32M Secure Digital Card (max. 96 photos @ 1296x976; 11 pictures @ 2608x1952, best), 2.0" LCD , 56xZoom - (8xOptical - 37-300 mm in 35mm. equivalent & 7xDigital), Flash, Sound, USB 2.0	*	\$470.-	🔒	
HP PhotoSmart 945 with Digital Camera Dock (in-camera battery charger, USB adapter to PC or printer & TV)	*	\$515.-	🔒	
HP AC Adapter for PhotoSmart C20/C30/C200/315/318/612/715/120/320/620/720/850/945, 6V, 2A	C8875A	*	\$42.0	🔒
HP AC Adapter for PhotoSmart 435/635/735/935/ M-series/R-series , 3.3V, 2.5A	C8912B	*	\$40.0	🔒
HP 8881 Digital Camera Dock for PhotoSmart 320/620/720/812/850/945 (incl. batteries, cables)	C8881A	*	\$66.0	🔒
HP 8886 Digital Camera Dock for PhotoSmart 435/635/735/935 (incl. batteries, cables)	C8886A	*	\$66.0	🔒
HP PhotoSmart M-series Dock for PhotoSmart M307/M407/... (incl. batteries, cables)	C8907A	*	\$62.5	🔒
HP PhotoSmart R-series Dock for PhotoSmart R507/R707/... (incl. rech.battery, cables, remote)	C8887A	*	\$67.0	🔒
HP PhotoSmart Starter Kit 4*rechargeable batteries, battery charger & camera bag	Y1789B	*	\$44.5	🔒
HP PhotoSmart M-series quick recharge kit 4*recharg. batteries, charger & camera bag	L1815A	*	\$39.5	🔒
HP PhotoSmart Quick Recharge Kit for R-series , rech.bat., charger, bag & travel pouch	L1810A	*	\$67.0	🔒
HP PhotoSmart Small Padded Camera Case w/ pocket for memory cards & belt loop	C8905A	*	\$15.5	🔒
HP PhotoSmart Large Padded Camera Case w/ pocket, belt loop & shoulder strap	C8906A	*	\$22.5	🔒
HP PhotoSmart Premium Camera Case for R-series , leather, w/ pocket, belt loop & strap	L1811A	*	\$25.0	🔒